



TH132 digital thermostat programming instructions.

Set the time and day by:

- Pressing the DAY, HOUR & MINUTE buttons.

Set the Comfort and Economy temperature setpoints by:

- Pressing the UP or DOWN buttons to the desired temperature, then press and hold the COMFORT (sun) or ECONOMY (moon) button until this sign appears in the LCD screen (this confirms the new settings are accepted).
- Press MODE/RETURN to exit.

N.B. These settings determine the desired temperatures when the room is occupied (COMFORT) and unoccupied (ECONOMY).

Select the operating mode by:

- Pressing the MODE/RETURN button repeatedly to select AUTOMATIC (clock) or MANUAL (hand) operation. AUTOMATIC (clock) should be selected if you wish to schedule your system.

Program the schedule by:

- Pressing the PGM button.
- To set the schedule for all days of the week simultaneously, press and hold the DAY button until all days show in the LCD screen. Alternatively, press DAY repeatedly to scroll to the specific day you wish to schedule.
- Use the HOUR & MIN buttons to enter program 1 time
- Repeat the above steps to set programs 2, 3 & 4.
- Press MODE/RETURN to exit the schedule

N.B. The schedule will only be active in AUTOMATIC (clock) mode.

Temporarily over-ride the set temperature by:

- Pressing the UP or DOWN buttons to set the desired temperature. The schedule will automatically return to the pre-programmed temperature at the next scheduled program time.

Permanently over-ride the set temperature by:

- Pressing the MODE/RETURN button to select MANUAL (hand) mode.
- Pressing the UP or DOWN buttons to set the desired temperature

N.B. This will over-ride any scheduled program until the AUTOMATIC (clock) mode is re-selected.

Set the floor temperature setpoint (AF model only) by:

- Pressing the recessed button (below suitcase button) with a pointed object.
- Pressing the UP or DOWN buttons to set the desired temperature.
- Press MODE/RETURN to exit.

N.B. The factory setting for the floor probe is 28C (82F) to avoid damaging delicate floorcoverings

Adjust the VACATION temperature setpoint by:

- Pressing the UP or DOWN buttons to set the desired temperature and then press the VACATION (suitcase) button.
- Press MODE/RETURN to exit.

N.B. The VACATION setpoint maintains a programmed temperature during a prolonged absence.