



## Multi-function digital thermostat programming instructions.

This thermostat is a combination model allowing a choice of A, F and AF modes

*A mode = Air only with built in sensor*

*F mode = Floor only with remote sensor*

*AF mode = Air & floor with built in and remote sensor*

Please see fitting instructions or contact Accolade Heating Ltd for advice regarding mode selection. A 3-metre long remote sensor cable is supplied with each thermostat.

### **Set the time and day:**

- Press the "CLOCK" button and use the "UP" & "DOWN" buttons to adjust the hours & minutes (using 24 hour clock). Press the "CLOCK" button once again to accept the changes. Press the "DOWN" button to select the day of the week. Changes will be accepted after 5 seconds inactivity.

### **Set the default Comfort, Economy and Holiday temperatures:**

- Press the "TEMPERATURE" button to select the COMFORT (sun), ECONOMY (moon) or HOLIDAY (suitcase) mode - the sign will appear on the LCD screen and the pre-set temperature will flash.
- Use the UP or DOWN buttons to select the desired temperature. After 5 seconds inactivity the thermostat will save the settings and revert back to standard mode.

N.B. These settings determine the desired temperatures when the room is occupied (COMFORT), unoccupied (ECONOMY) or unoccupied for a longer period of time (HOLIDAY).

### **Select the operating mode:**

- Press the MODE button (next to the "UP" & "DOWN" buttons) to select AUTO or MANUAL operation. AUTO should be selected if you wish to schedule your system.

### **Program the schedule:**

- Press the PROGRAM button (bottom left of unit) to select program number 1.
- To set the same schedule for all days of the week simultaneously, press and hold the "DOWN" button for 5 seconds until all days show in the LCD screen. Alternatively, press "DOWN" repeatedly to scroll to the specific day you wish to schedule.
- Press the "CLOCK" button to select the start time and use the "UP" & "DOWN" buttons to enter program 1 time
- Repeat the above steps to schedule programs 2, 3 & 4.
- Press "CLOCK" button to exit the schedule. After 5 seconds inactivity the thermostat will save the settings and revert back to standard mode.

N.B. The schedule is only active in AUTO mode.

### **Temporarily over-ride the set temperature:**

- Press the MODE button (next to the "UP" & "DOWN" buttons) to select "MANUAL" operation.
- Press the "TEMPERATURE" button and use the "UP" & "DOWN" buttons to select the desired temperature.
- After 5 seconds inactivity the thermostat will save the settings and revert back to standard mode.

N.B. This temperature will be maintained until "AUTO" mode is re-selected.

### **Set the floor temperature setpoint (AF mode only):**

- Press and hold down the MODE button (next to the "UP" & "DOWN" buttons) for 5 seconds – the temperature display will flash.
- Press the UP or DOWN buttons to set the desired temperature.
- Press "TEMPERATURE" button to accept the changes and exit.

N.B. The default setting for the floor sensor is 28C (82F)